ScanHome

Wired barcode scanner virtual serial port driver installed

Suitable for ScanHome wired barcode scanner series products

Make sure to follow the instructions in the document

Shanghai ScanHome Technology Co.,Ltd
www.scanhome.net

Step 1: Restore the serial port to factory Settings

First step

USB KBW（Second step）


Step 2: Save the "ScanHome Wired barcode scanner virtual serial port driver installed" folder to the desktop and scan the following 2D code

Third step


**(Win10 and above only need to scan the code,
do not need to perform the following operations
Win10 below need to install the driver, perform the following operations)**

Step 3: Update the driver software


When the correct Settings sound is heard，right-click Computer — Device Manager — Other Devices，and select SM-2D PRODUCT USB UART — Update Driver Software (P).

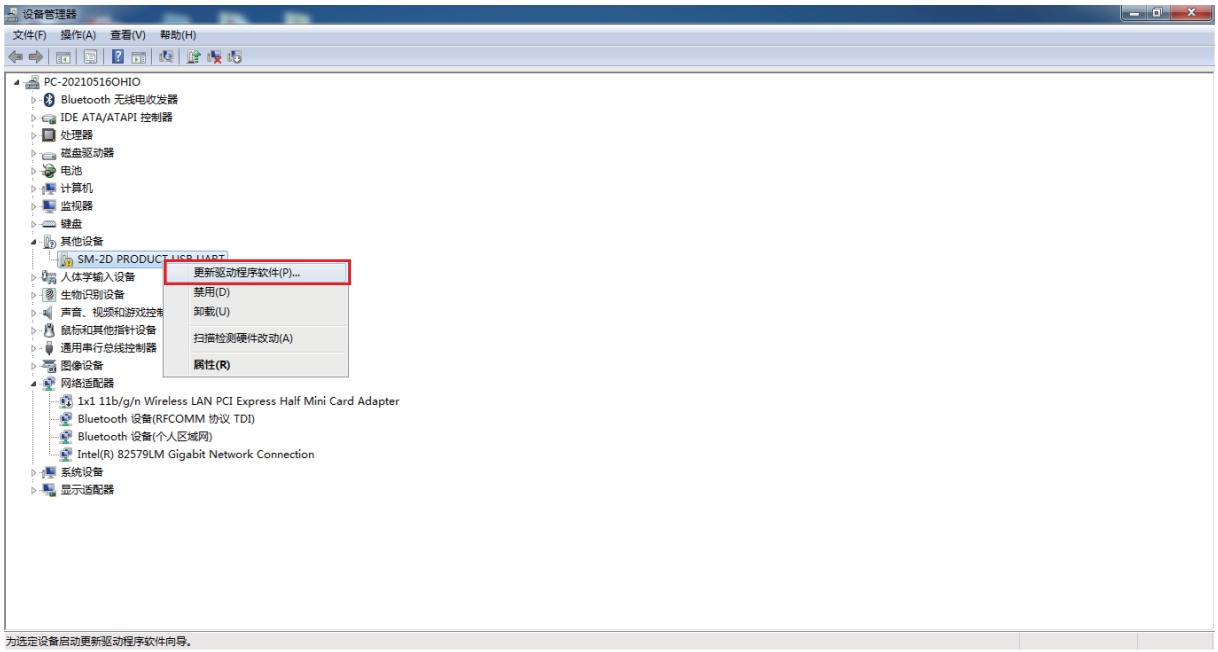


Select “Browse Computer for Driver Software”

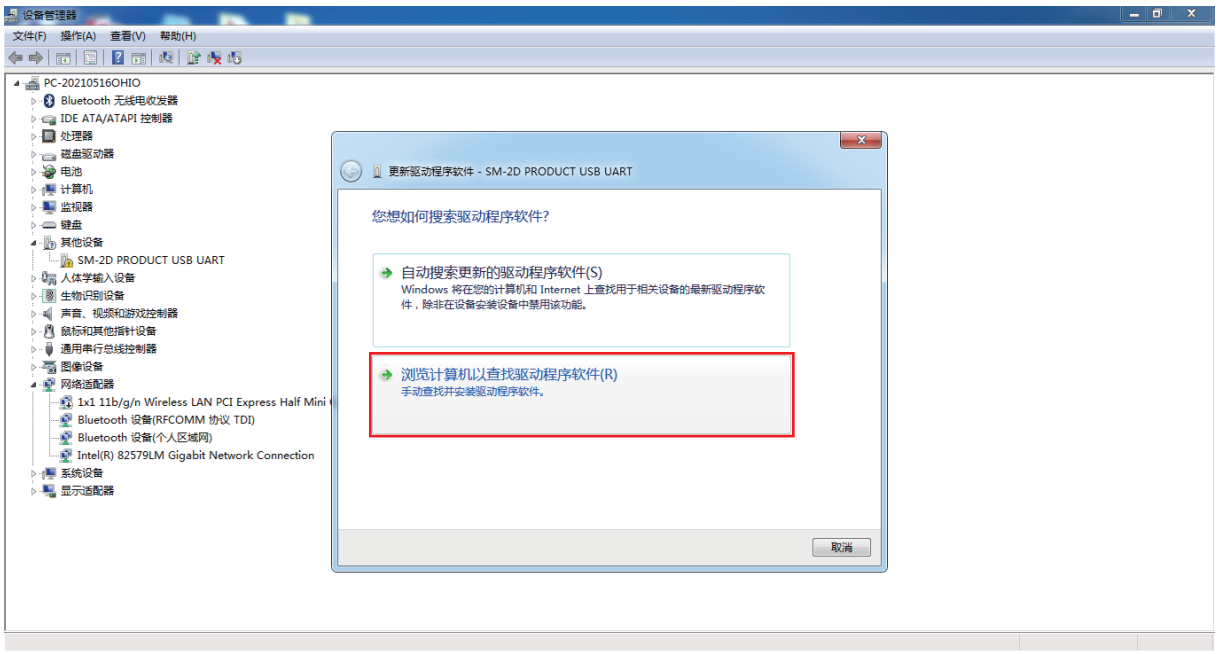


Select “Select (L) from the computer's device drive sequence table”

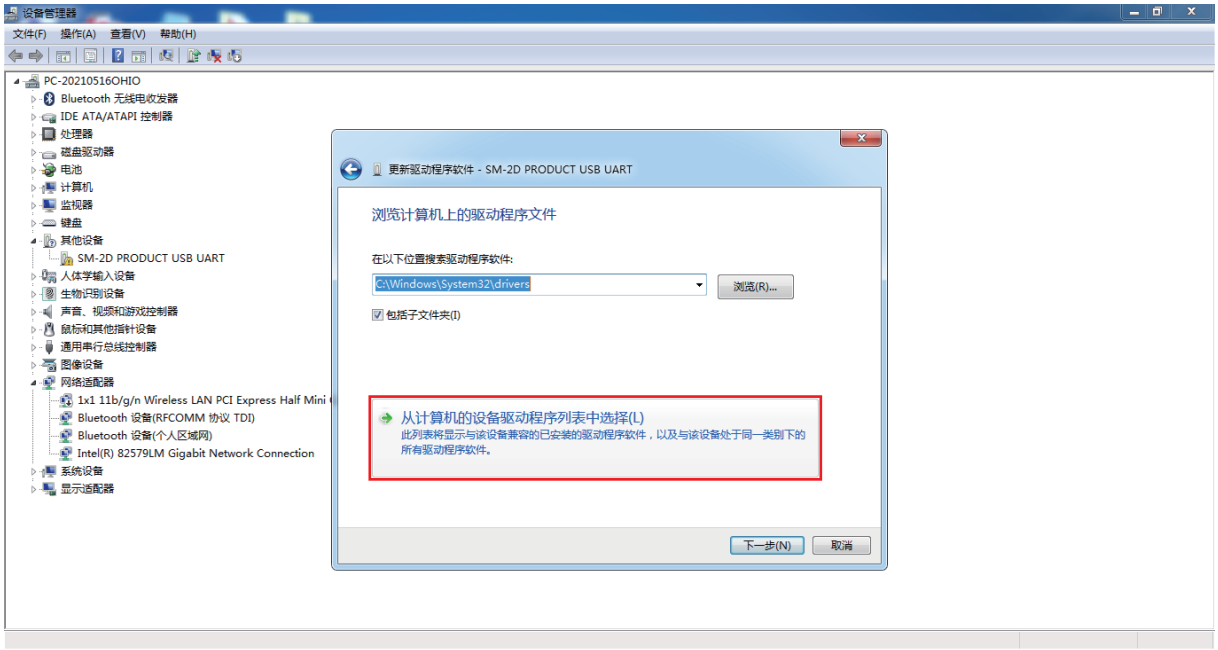


Select “Show All Devices” — Next — Install from Disk — Browse

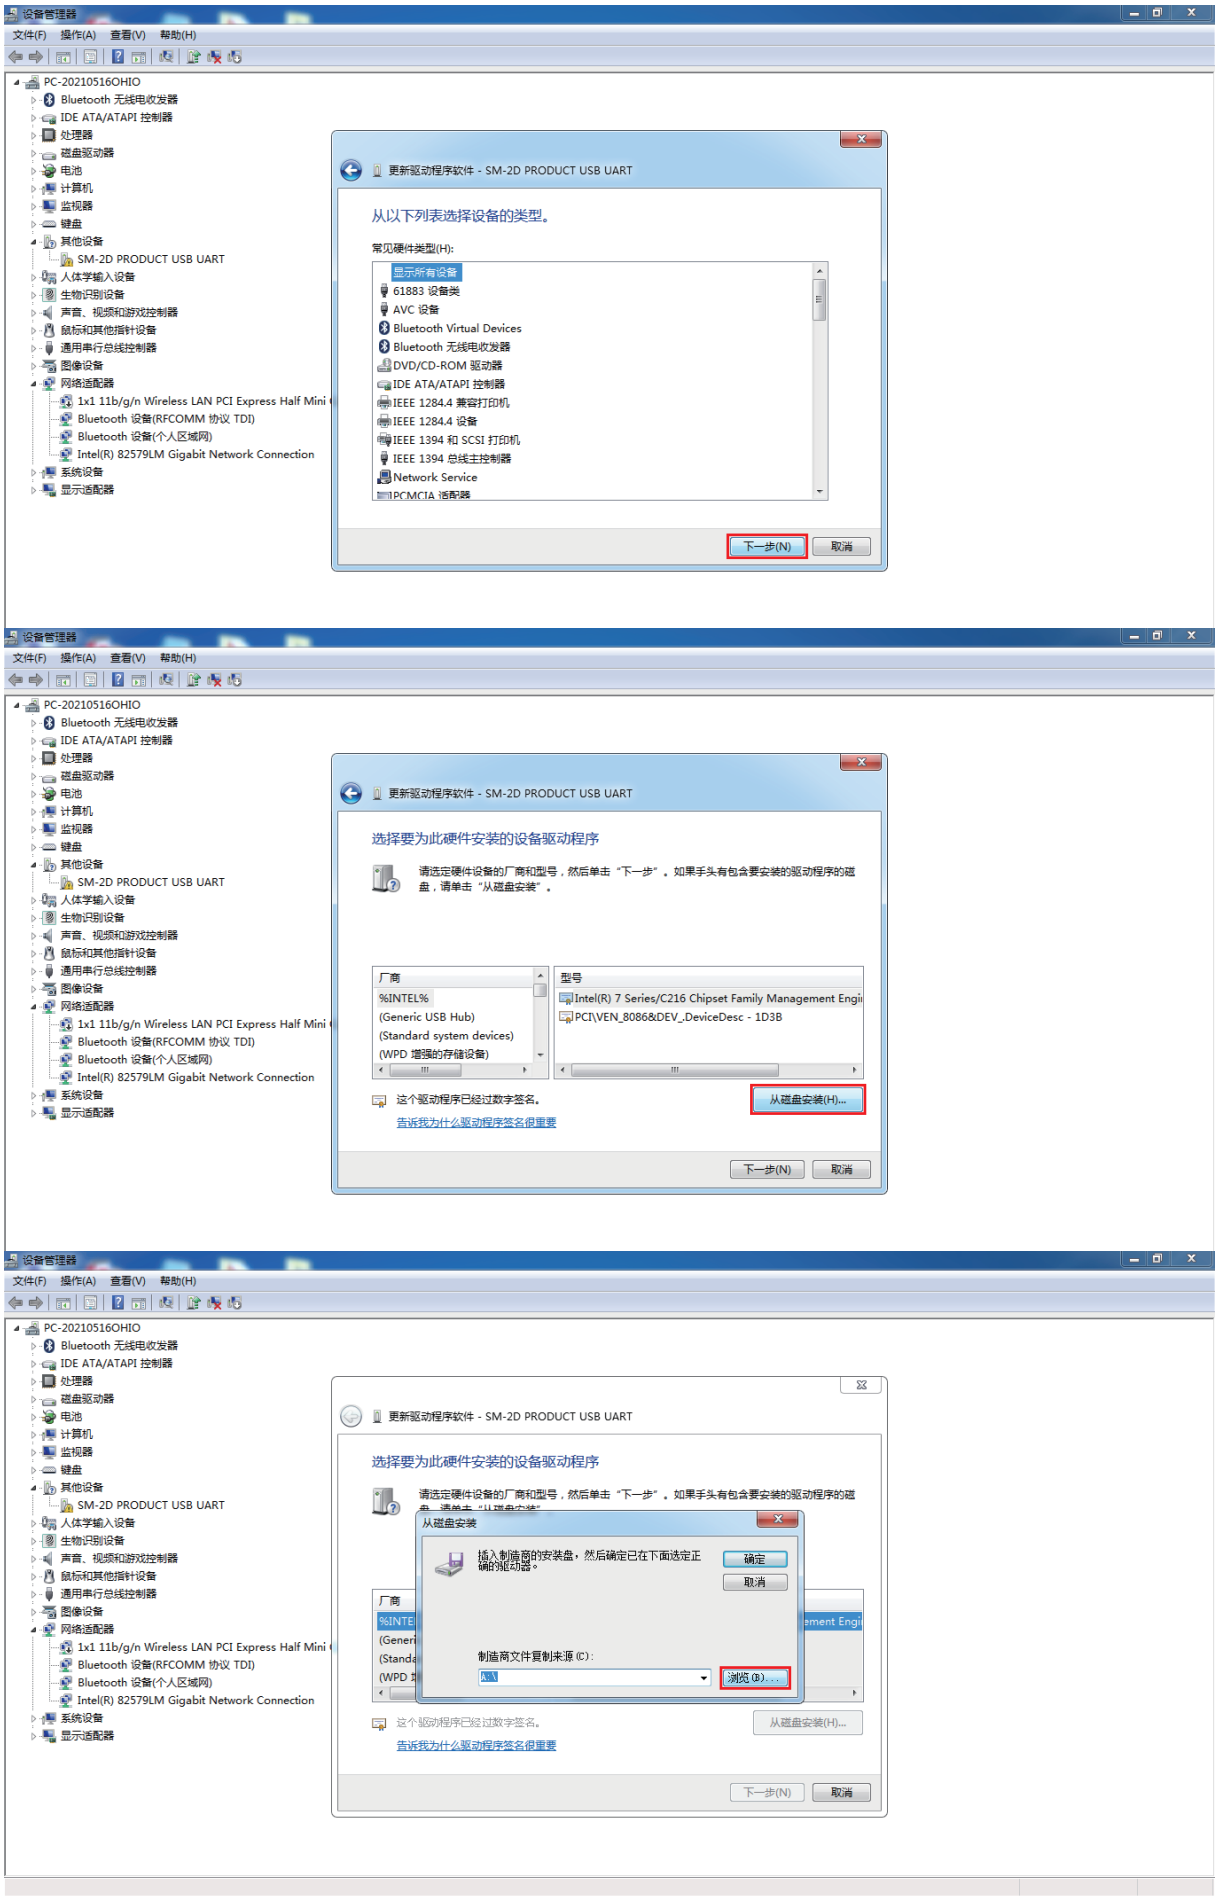

Select “Desktop” \ScanHome Wired barcode scanner virtual serial port driver installed\ SM_UsbToUartDriver — Click “Open” — Select “USB Virtual COM Port” — Next step

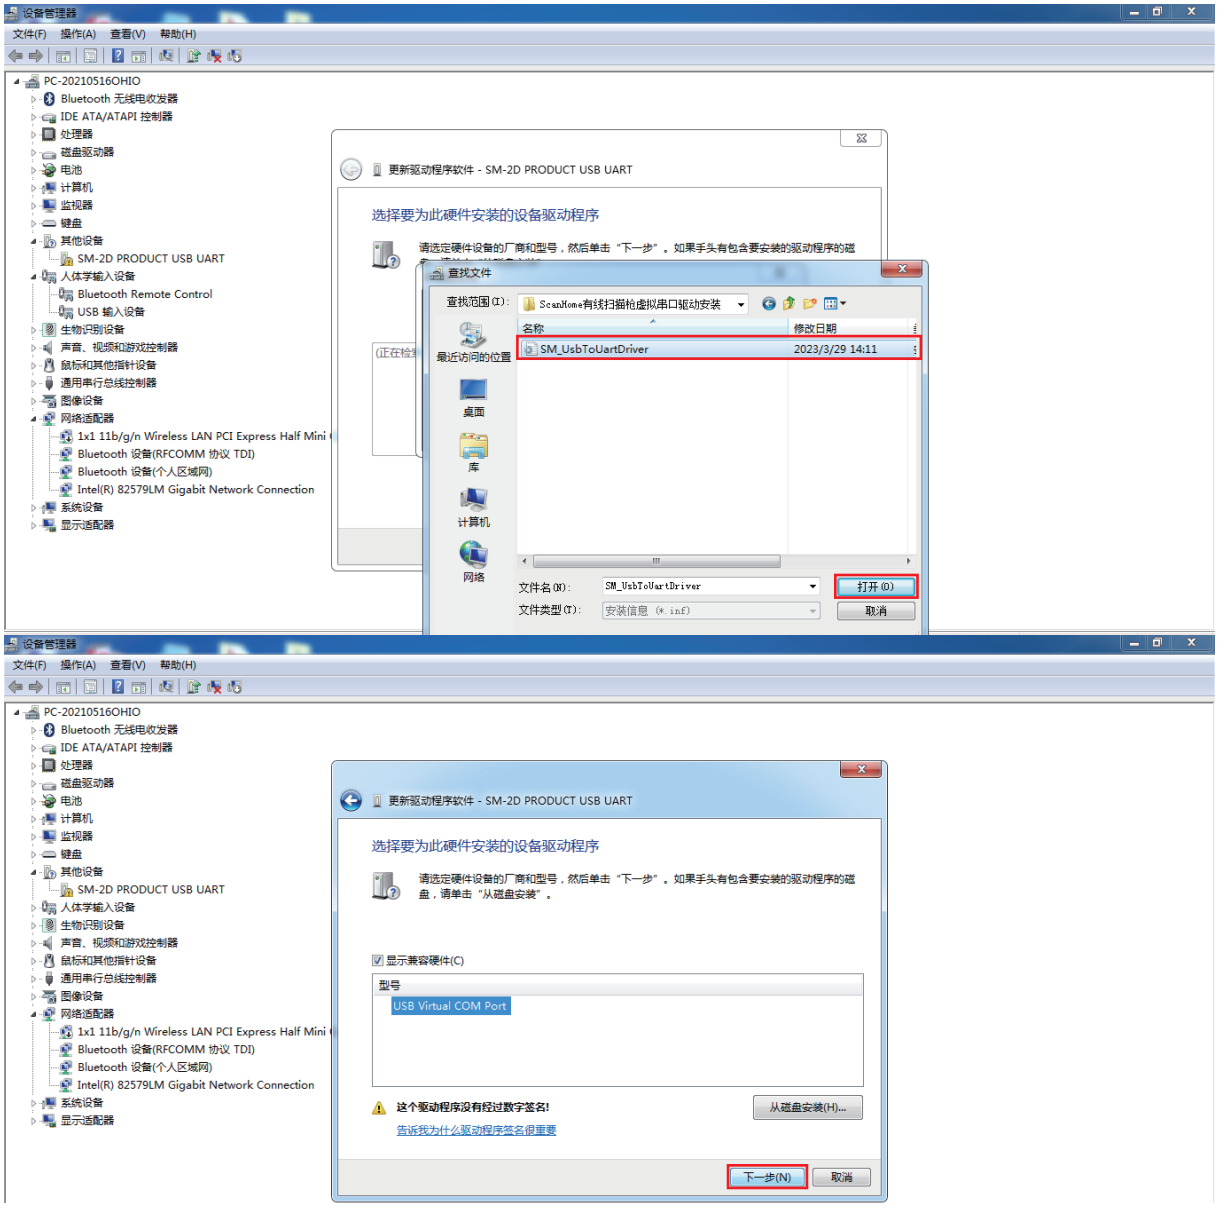


After the installation is complete “USB Virtual COM Port (COM?)” is displayed in Device Manager
Note： “COM?” Be sure to force the Settings within COM1-COM9,
The driver is installed successfully and can read the serial port function

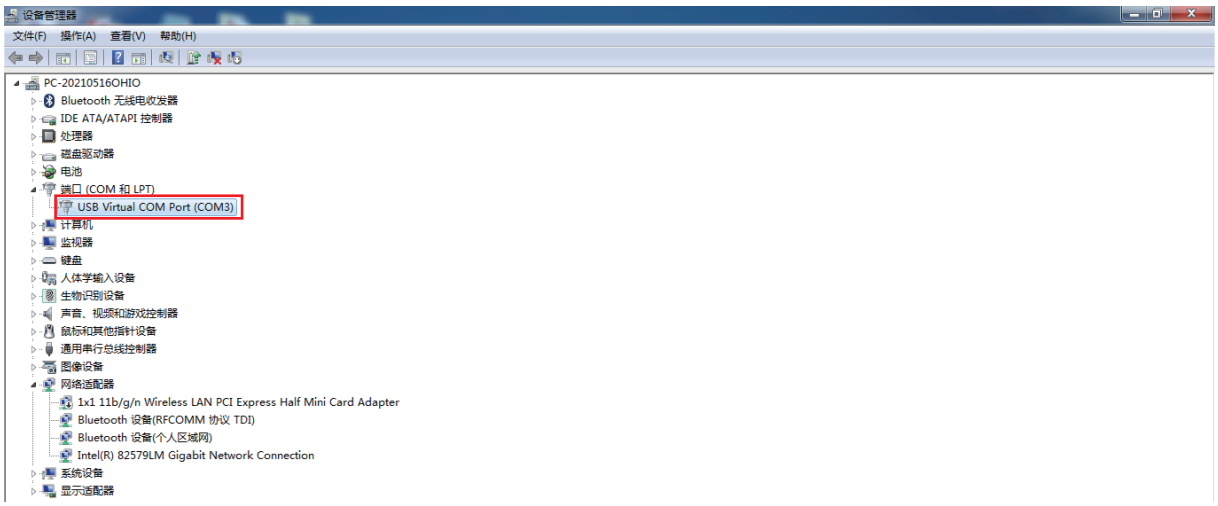


Test after setting

Open the UartAssist serial port tool，Select serial port number（After the setup is complete，COM？ appears in Device Manager）— Click open

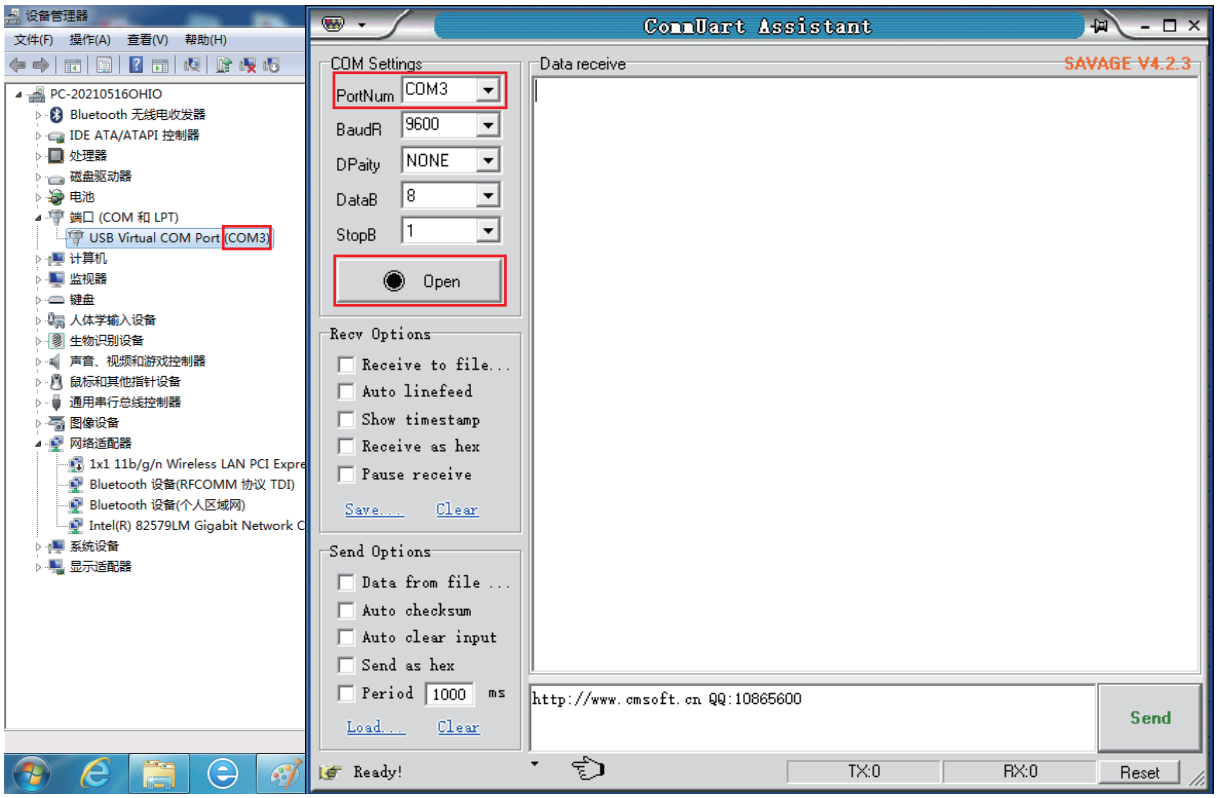

Test barcode:



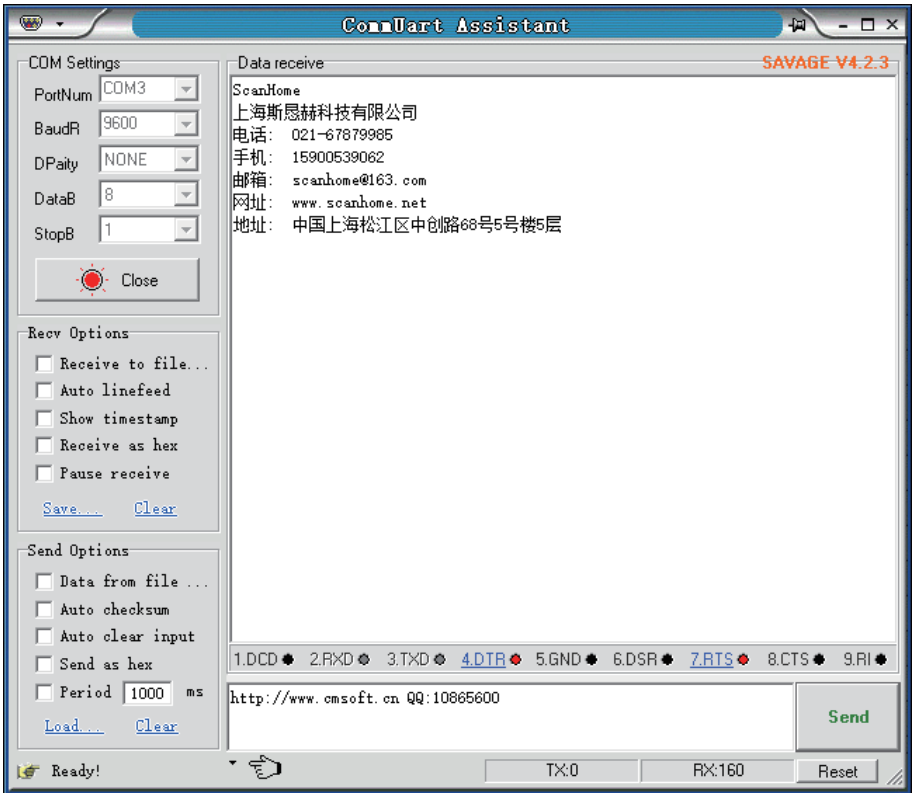


If you want to display it in text

If you want to display it in text，you need to turn off the serial Assistant，
open the serial keyboard output tool，
Open 【COM_Text v1.5_中文版.exe 】file
Serial Port：USB Virtual COM Port（COM?）
Baud rate：9600　　Parity bit：none
Data bit：8　　Stop bit：1
Code：UTF-8 or 简体中文(GB_2312 | GBK) choose according to actual coding
Click “OK”，you can directly scan the Chinese barcode in TXT\EXCSL\WORD，etc




Test barcode:



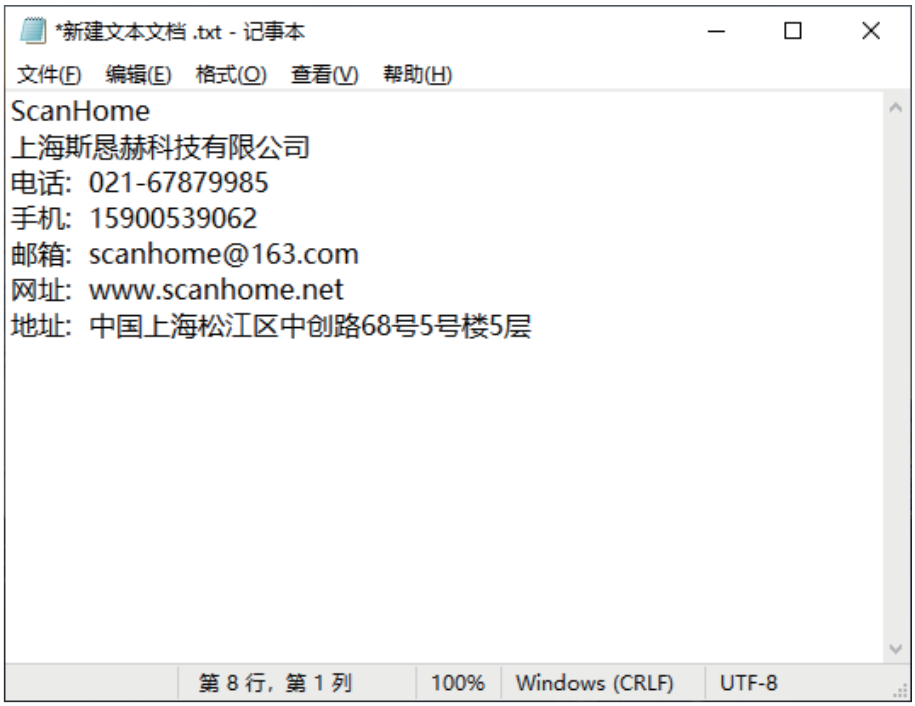

“COM?” Must be mandatory within COM1-COM9. Setting method:

Right-click “USB Virtual COM Port (COM?)” — Properties — Port Settings — Advanced — COM? — Confirm

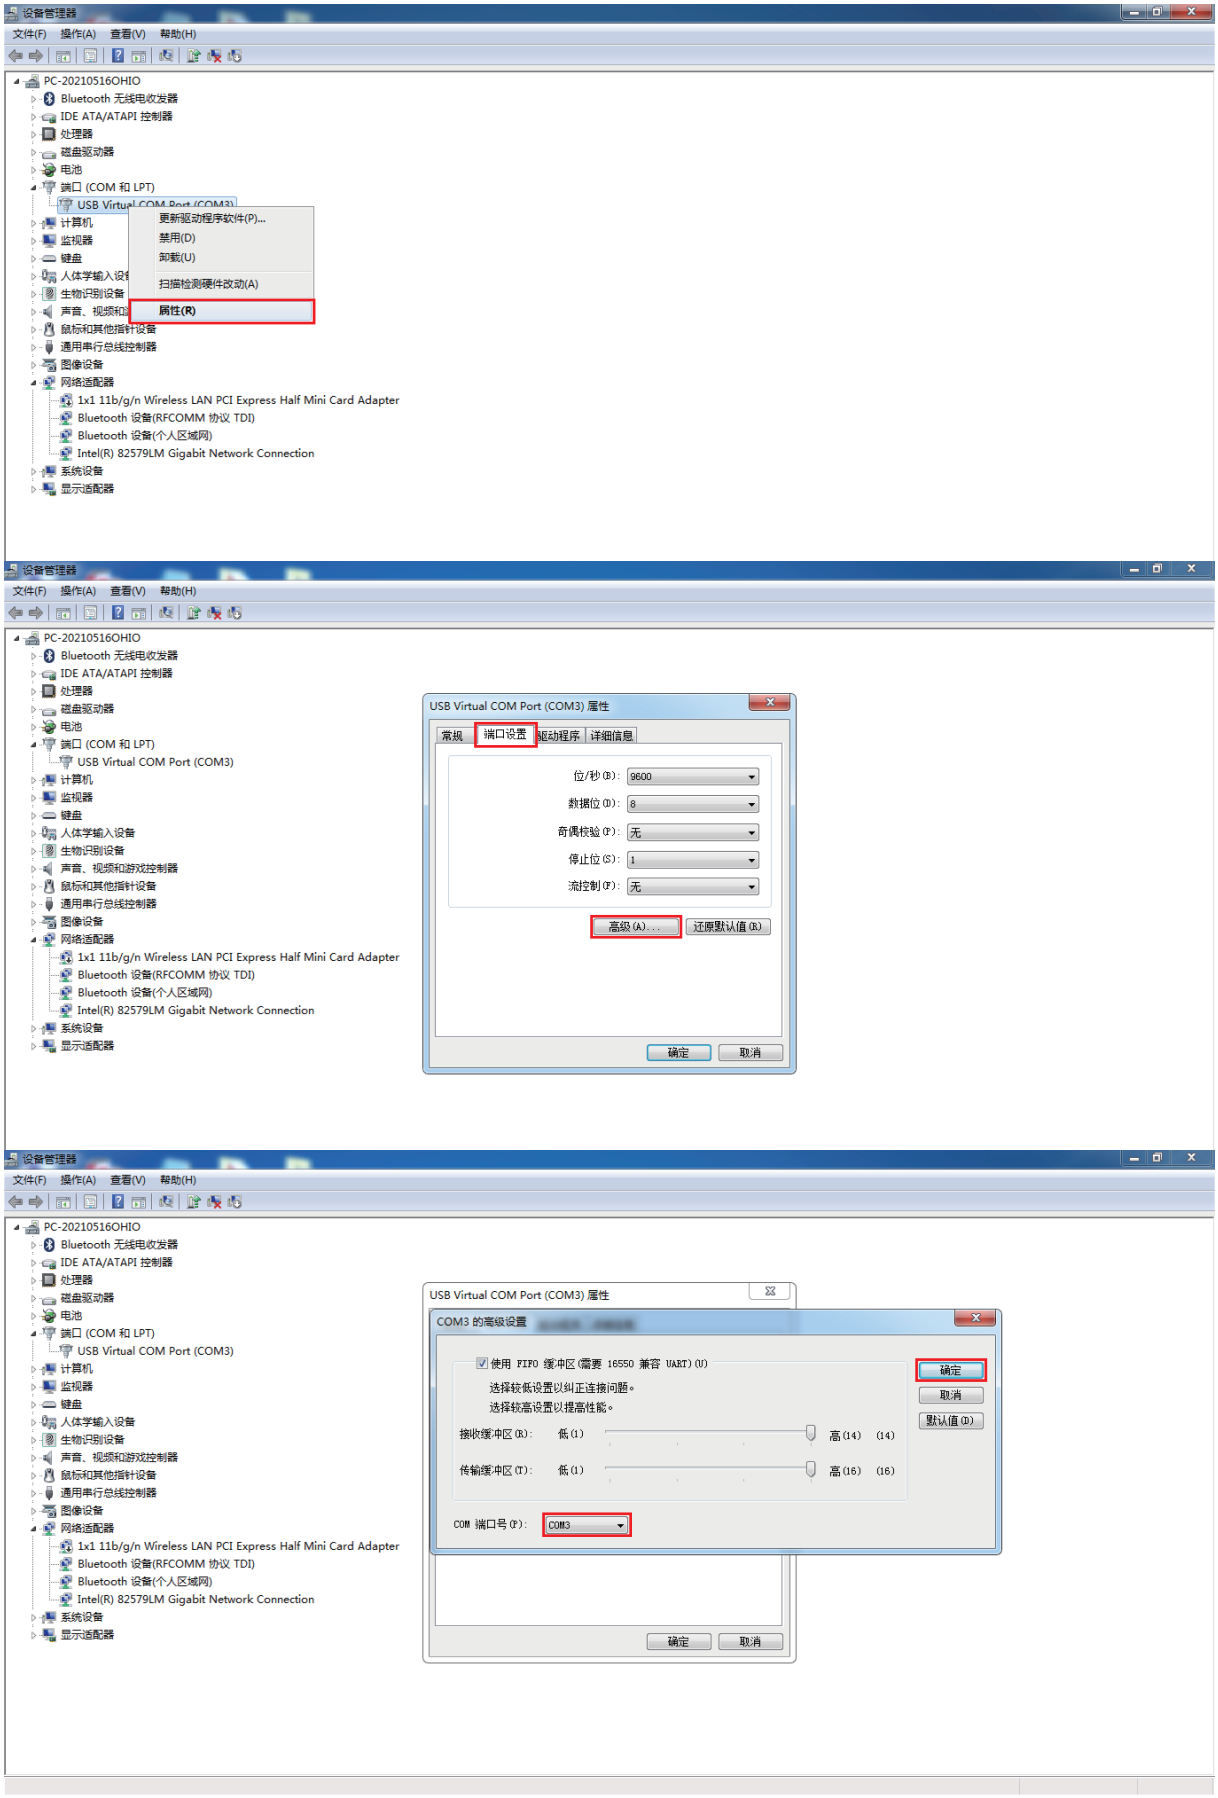

Set the USB status back

To set USB status back，just scan the following barcode：

Right - click My computer — Device manager — Anthropology input equipment
More：USB input device

